



ATTENZIONE! Il flusso dell'aria deve essere orientato sempre verso il termosifone (fig. 7).

ATTENTION! The airfluid have always to be directed to the radiator (fig. 7).

ATTENTION! Le flux de l'air doit être dirigé toujours vers le radiateur (fig. 7).

VORSICHT! Der Luftstrom muss immer nach der Zentralheizung gerichtet sein (Abb. 7).

ATENCIÓN! EL FLUJO DE AIRE SE DEBE ORIENTAR EN DIRECCIÓN DO CALORIFERO (fig. 7).